> DLI* CVD & ALD Vaporizer

High Performance, Compact, Precise, Innovative liquid and solid precursors Delivery and Vaporization System for ALD, CVD, MOCVD, PECVD, MLD and all gas phase processes.

The VAPBOX 1500 vaporizes pure liquid compounds and solid ones dissolved in a carrier liquid (organic solvent) up to 300°C.

The VAPBOX 1500 is able to handle and vaporize most of solid and liquid compounds including low vapor pressure, thermally labile and viscous ones.

The VAPBOX 1500 provides high and unmatched performances based on a pulsed injection of a mixture of liquid and carrier gas. That pulsed injection is performed by a proprietary Injection Head and allows a very fine atomization of the liquid to be vaporized. The liquid is flash vaporized and the generated vapors can be used for the synthesis by ALD and CVD of thin films, multilayers structures, nanoparticles and nano-objects of numerous complex functional materials such as for instance multi-metallic oxides (high-k dielectrics, magnetic superconducting materials, ferroelectrics, piezoelectrics), various chalcogenides (PCRAM and CIS/CIGS photovoltaic materials) and transparent conductive oxides (TCO).

Because of its unique proprietary way to deliver and atomize the liquid inside the vaporizer the VAPBOX 1500 is able to achieve a real non-contact flash vaporization therefore generating particle free vapors.

Indeed, the blasting of the carrier gas/liquid mixture inside the vaporizer allows generating an aerosol of droplets around 10 microns in diameter. Such very small droplets can be easily flash vaporized. Competitors' vaporizers are generating bigger liquid droplets that cannot be flash vaporized and clog the vaporizer.

The VAPBOX 1500 operates from vacuum to atmospheric pressure.

Thanks to delivering of accurate and stable liquid flows, the VAPBOX 1500 delivers accurate and stable vapor flows.

The VAPBOX 1500 can inject and vaporize 2 liquids or solutions simultaneously or sequentially.

*DLI = Direct Liquid Injection

US patent pending and patents pending in other countries



> Technical specifications

Injection Heads (liquid inlets)

> 1 or 2

ICU (Injection Control Unit)

> 24 VDC remote and rackable 19" 2U unit

Heating:

- > Three heating zones, up to 300°C, 1650 W
- > 3 K type thermocouples: (1 per heating zone)

Fittings:

- > 1/8" compression type fitting for liquid inlet(s) (1-2)
- > 1/4" female VCR fitting for carrier gas inlet(s) (1-2)
- > 1/2" male VCR fitting for vapor outlet

Versions:

> 230 VAC version and 115 VAC version

Accessories:


- > 1 Liquid flow controlling kit per Injection Head, including a Liquid Flow Meter (LFM)
- > Liquid panel with 1 precursor tank per Injection Head and with an optional solvent tank
- > Carrier gas panel with 1 carrier gas Mass Flow Meter (MFM) per Injection Head
- > TCU (Temperature Control Unit): 19" remote and rackable 4U unit

Flows range (per Injection Head):

- > Typical carrier gas flow range = 150 to 7500 sccm
- > Typical liquid flow range = 0.1 to 15 g/min




> Dimensions

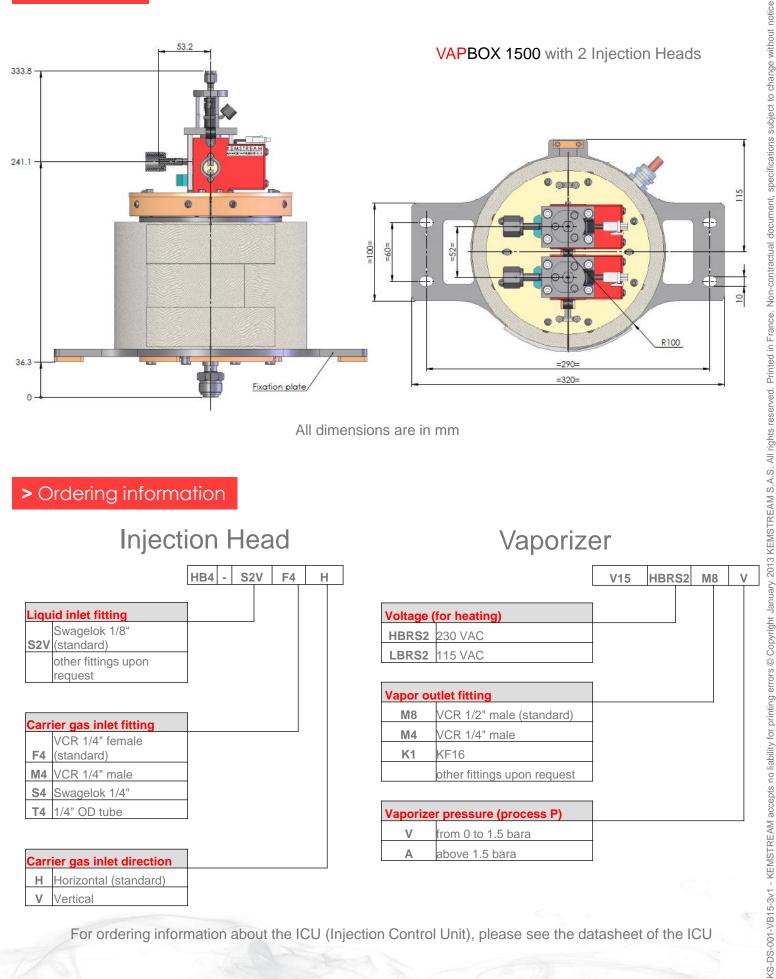

All dimensions are in mm

> Ordering information

Injection Head

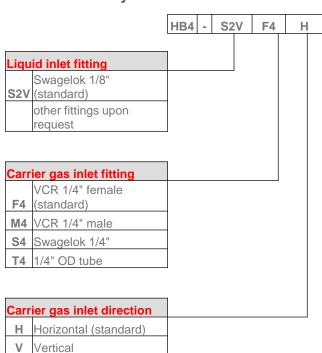

Vaporizer

		V15	HBRS2	M8	V
		1			
Voltage (for heating)					
HBRS2	230 VAC				
LBRS2	115 VAC				
		•			
Vapor outlet fitting					
M8	VCR 1/2" male (standard)				
M4	VCR 1/4" male				
K1	KF16				
	other fittings upon request				
Vaporizer pressure (process P)					
V	from 0 to 1.5 bara				
Α	above 1.5 bara				

For ordering information about the ICU (Injection Control Unit), please see the datasheet of the ICU

